 
 
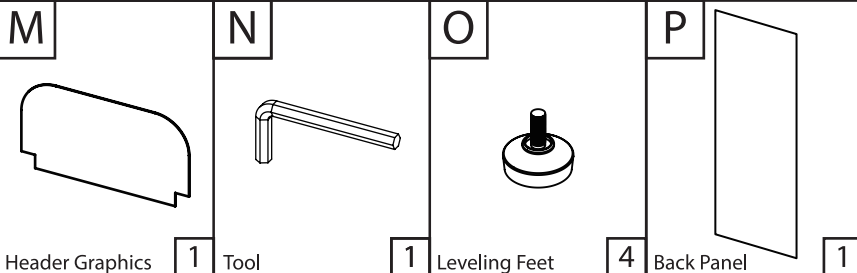 
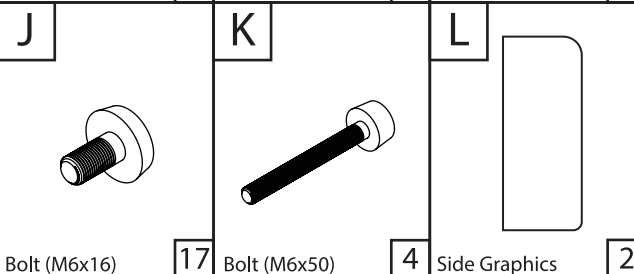 
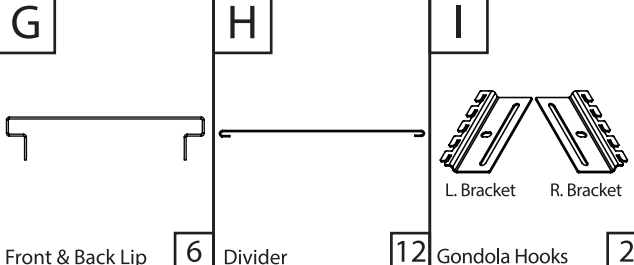 



Coca-Cola / Dollar General Basket Display - Assembly Instructions

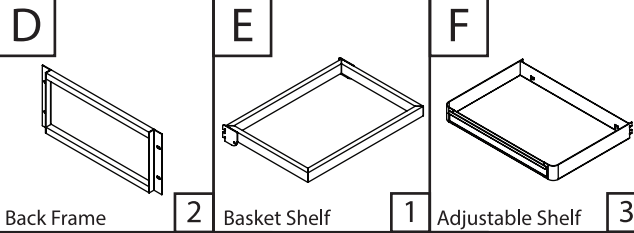


Scan the QR code or visit tmaksinc.com/instructions_17540 to view assembly video.

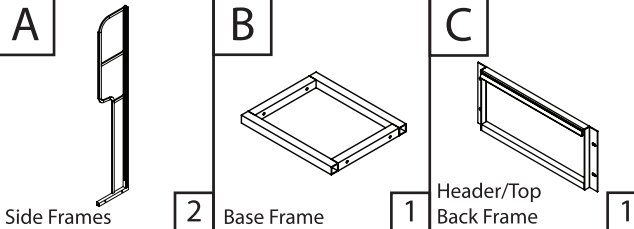

 
1 Attach (O) Leveling Feet to the bottom of each (A) Side Frame. Then attach (A) Side Frames to (B) Base Frame using x4 (K) Bolts and tighten with (N) Tool.

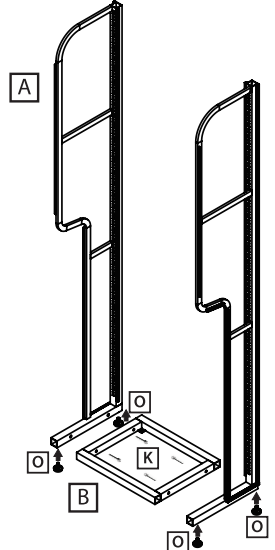


2 Attach two (D) Back Frames to middle and lower portions located at the back of (A) Side Frames using x8 (J) Bolts and tighten with (N) Tool. Attach (C) Header/Top Back Frame using x4 (J) Bolts and tighten with (N) Tool.

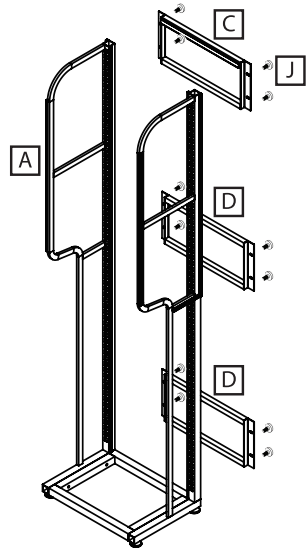 

 
3 Install (E) Basket Shelf at desired height.

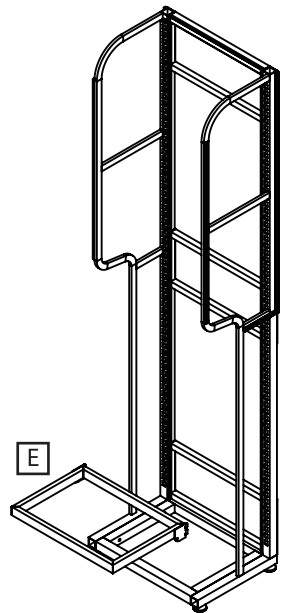

 4 Insert (G) Front & Back Lip onto (F) Adjustable Shelves and install all three shelves at desired height.

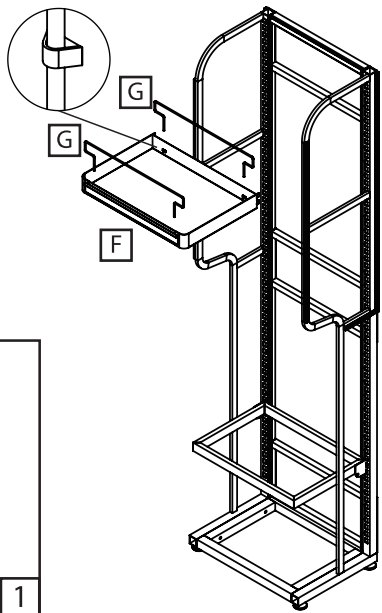


5 Attach (H) Dividers by hooking into the front of (G) Front & Back Lips then bending the Back Lip toward you to hook to the rear.

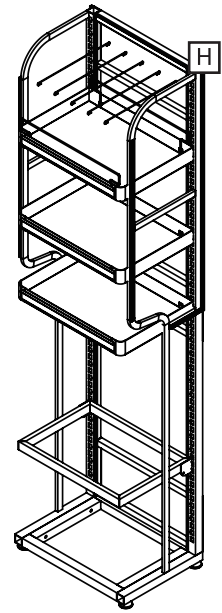 


Coca-Cola / Dollar General Basket Display - Assembly Instructions

 
- 6** Install (P) Back Panel by sliding into the channel located at the rear of the display attached to the inside of the (A) Side Frame.

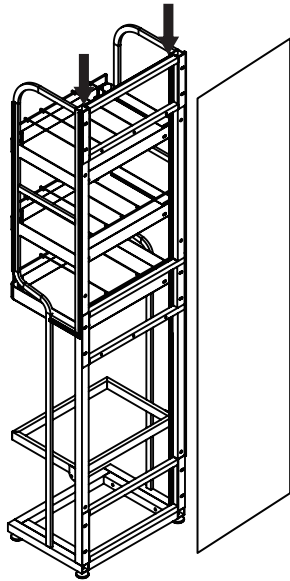

 - 7** Finish POS Installation by Inserting (L) Side and (M) Header Graphics into their corresponding slots.

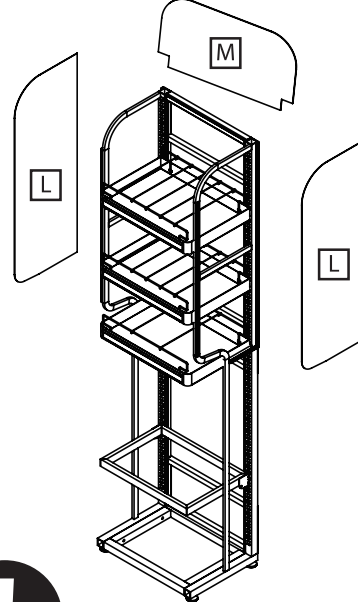

8

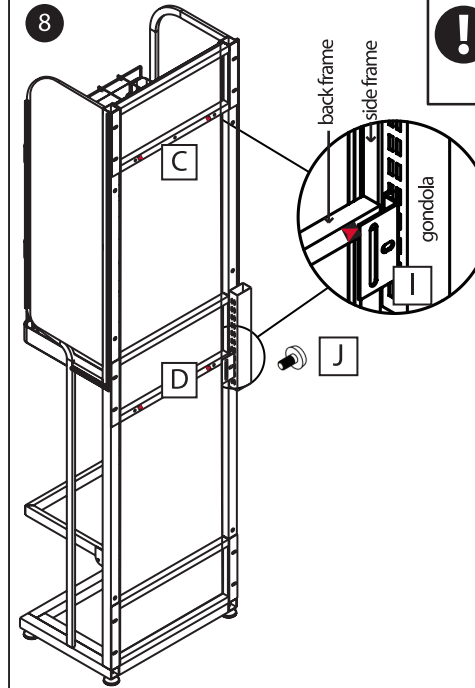 

! Scan the QR code or visit tmaksinc.com/instructions_17540 to view assembly video.



Locate open area on Gondola with no shelving blocking which can align with either (C) Header Frame or (D) Back Frame shown. Once appropriate location has been made hook (I) Gondola hook into place on the Gondola.

Now align the display up with the gondola hook and install onto the area with the **RED ARROW** marked by using (J)Bolts. As you tighten the display will become rigid.

NOTE: Before you fully tighten the Bolt make sure the Display is as close to the Gondola as possible and finish tightening.

Now Adjust (O) Leveling feet appropriately so the display becomes **FIRM** onto the ground.



MISSING PARTS / DAMAGE CLAIM INSTRUCTIONS

1. DO NOT discard the box or original packaging.

In the case of damaged goods caused by shipping, photo evidence will be required.

2. Take photos of the box & markings.

A photo of the markings (text) on the side of the box is required for all cases in which a replacement part is needed. This helps to identify the item number and ensures the correct parts are pulled.

3. Take photos of damage (if applicable).

A photo of the damaged part(s) is always required to file a claim and expediently process the replacement part. Please make sure you keep the box even if it is damaged.