



Warmies Wood Display - Assembly Instructions




Scan the QR code or visit the web address directly to view the assembly video: displaybuilds.com/instructions_19000

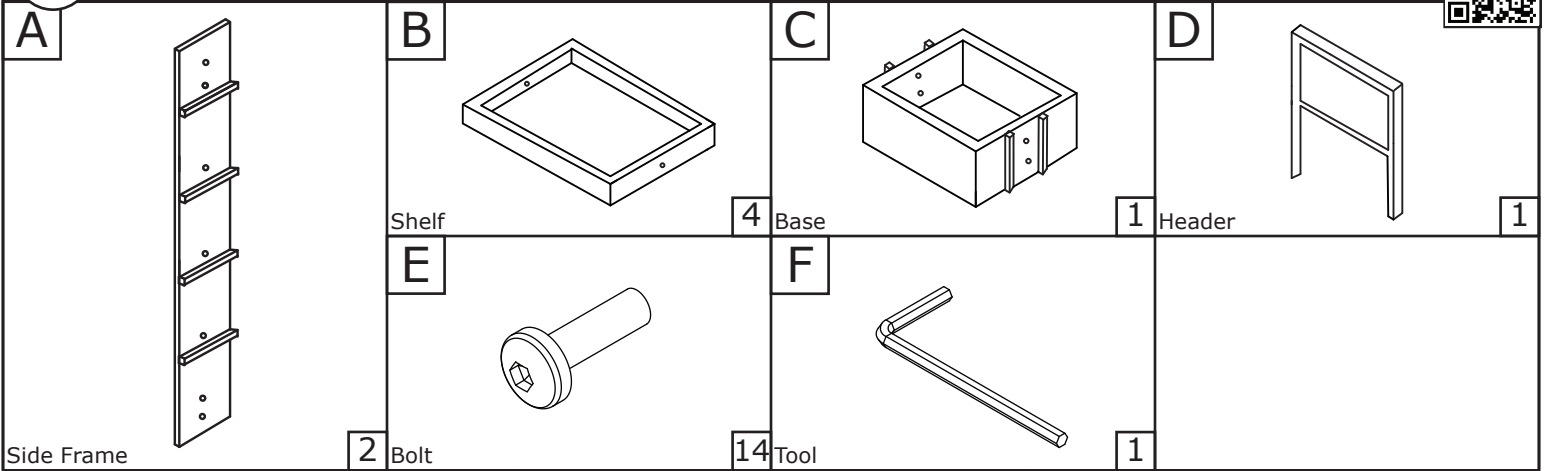


1 Note the arrangement of parts - (A) Side Frames, (B) Shelves, and (C) Base as shown below.
 -Bottom Shelf - "Naturally Weighted"
 -2nd Shelf - "Scented with French Lavender"
 -3rd Shelf - "Warm in a Microwave"
 -Top Shelf - "Soothing Warmth and Comfort"

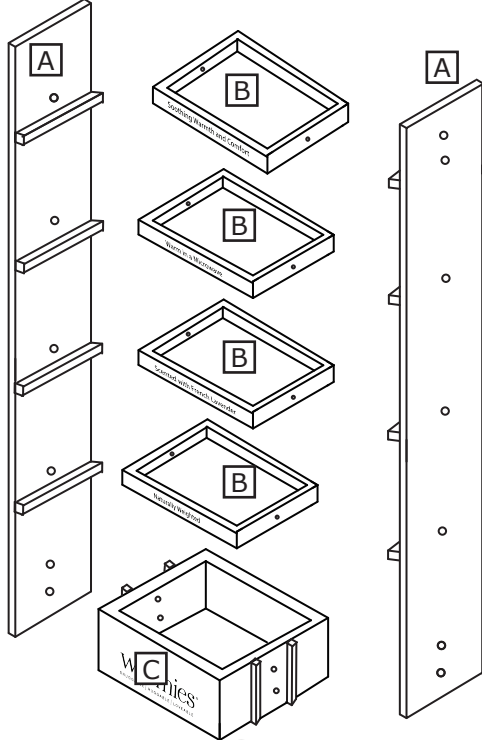

2 Secure all pieces together as shown below with x12 (E) Bolts and tighten with (F) Tool.

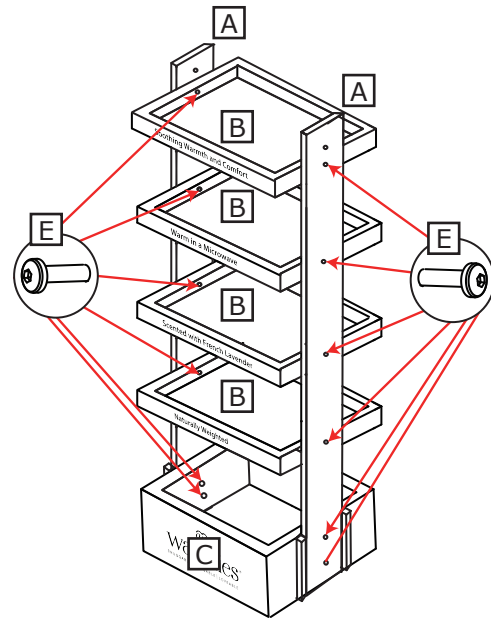

3 Attach (D) Header to (A) Side Frames with x2 (E) Bolts and tighten with (F) Tool.

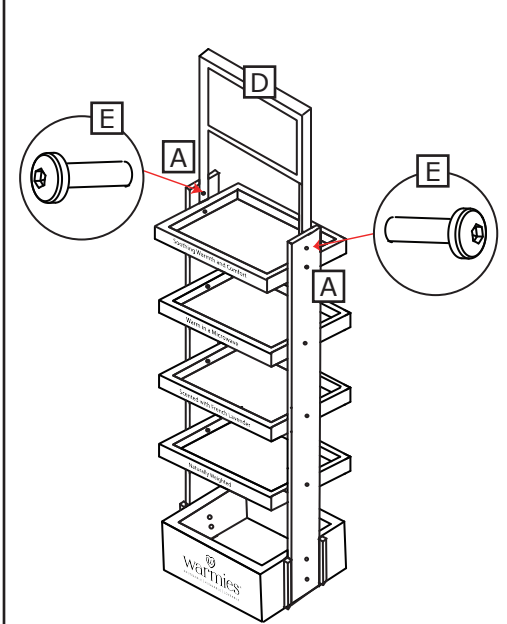

MISSING PARTS / DAMAGE CLAIM INSTRUCTIONS

- DO NOT** discard the box or original packaging.
 In the case of damaged goods caused by shipping, photo evidence will be required.
- Take photos of the box & markings.
 A photo of the markings (text) on the side of the box is required for all cases in which a replacement part is needed. This helps to identify the item number and ensures the correct parts are pulled.
- Take photos of damage (if applicable).
 A photo of the damaged part(s) is always required to file a claim and expediently process the replacement part. Please make sure you keep the box even if it is damaged.
- Send an email with the images requested.
 Email a description of the claim along with the images required above at displaybuilds.com/contact or directly to help@displaybuilds.com. Call our toll-free number 1-866-308-8368 for further assistance.