














Riki Display - Assembly Instructions

JOB 18857




Scan the QR code or visit the web address directly to view the assembly video: displaybuilds.com/instructions_18857

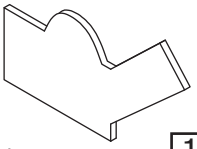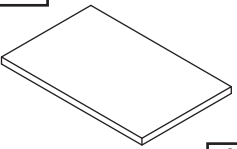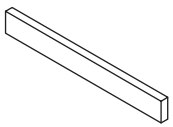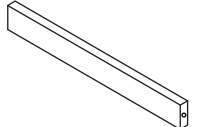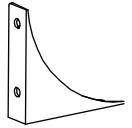


A  Side Frame 2	B  Header 1	C  Shelf Bottom 4	D  Shelf Lip 8	E  Base Support 1	F  Cam Bolt 32
H  Header Bracket 2	I  Base Bracket 2	J  Screw 18	K  Bolt 6	L  Barrel Nut 6	G  Cam Nut 32
					M  Screwdriver 1

- 1** Thread x8 (F) Cam Bolts into each (A) Side Frame and tighten with (M) Screwdriver.

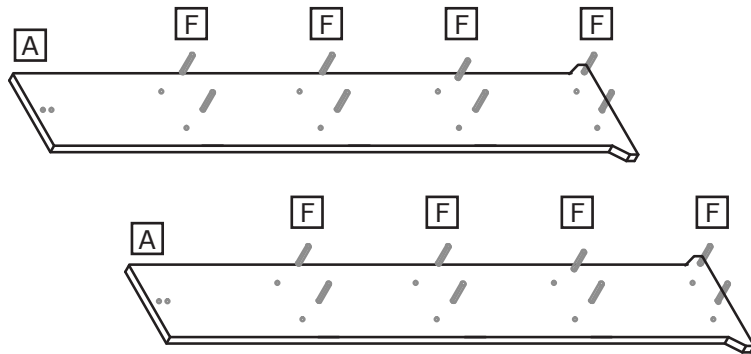


- 2** Thread x2 (F) Cam Bolts into each (D) Shelf Lip and tighten with (M) Screwdriver. Then place x4 (G) Cam Nuts in the holes at the front and back (long side) of the (C) Shelf Bottom. Insert the (F) Cam Bolts on the (D) Shelf Lips into the (C) Shelf Bottom and (G) Cam Nuts, then tighten each (G) Cam Nut with (M) Screwdriver.


Artwork should match on the front lip and back lip

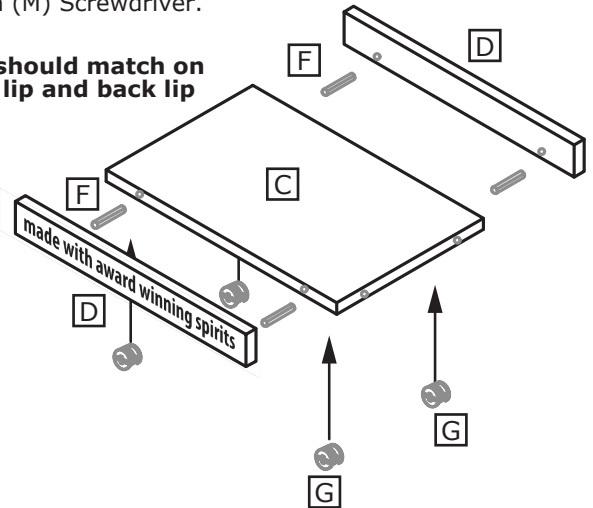

- 3** Install each assembled shelf in the order shown by inserting x2 (G) Cam Nuts in the bottom holes of each (C) Shelf Bottom (short side), then aligning with the (F) Cam Bolts already installed in the (A) Side Frame. Tighten each (G) Cam Nut with (M) Screwdriver.

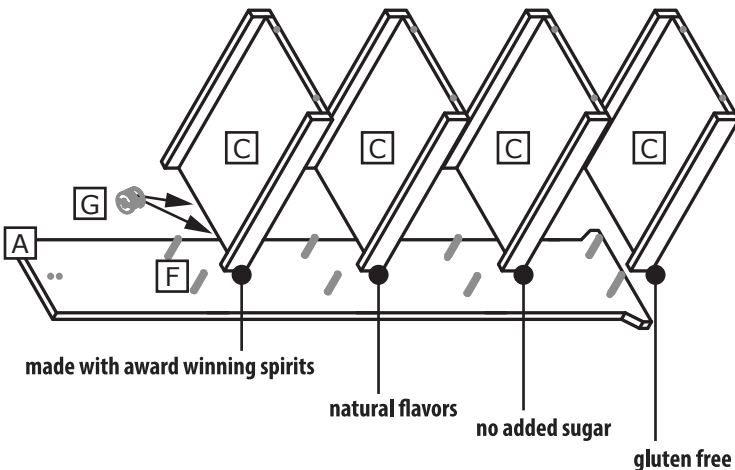

- 4** Similar to Step 3, insert x2 (G) Cam Nuts in the bottom holes of each (C) Shelf Bottom (short side), then align with the (F) Cam Bolts already installed on the other (A) Side Frame. Tighten each (G) Cam Nut with (M) Screwdriver.

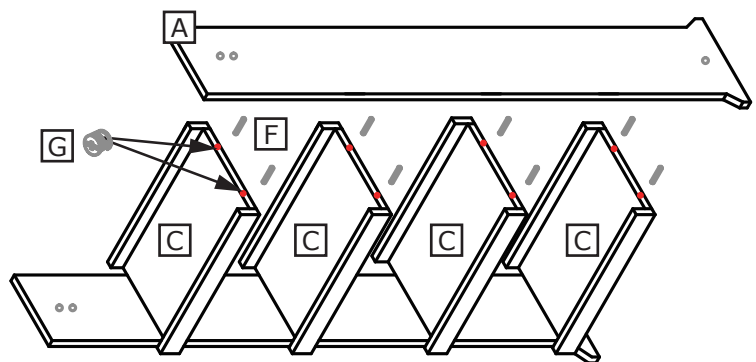






Scan the QR code or visit the web address directly to view the assembly video: displaybuilds.com/instructions_18857



- 5** Insert x2 (L) Barrel Nuts into (E) Base Support, then attach to the (A) Side Frames under the bottom shelf with x2 (K) Bolts and tighten with (M) Screwdriver. Attach x2 (I) Base Brackets as shown with x5 (J) Screws each and tighten with (M) Screwdriver.

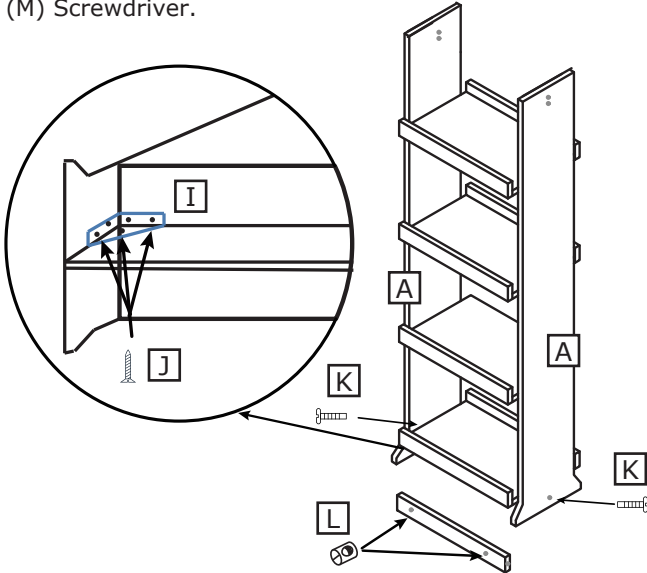

- 6** Insert x4 (L) Barrel Nuts into (B) Header, attach to (A) Side Frames with x4 (K) Bolts, and tighten with (M) Screwdriver. Attach x2 (H) Header Brackets as shown with x4 (J) Screws each and tighten with (M) Screwdriver.

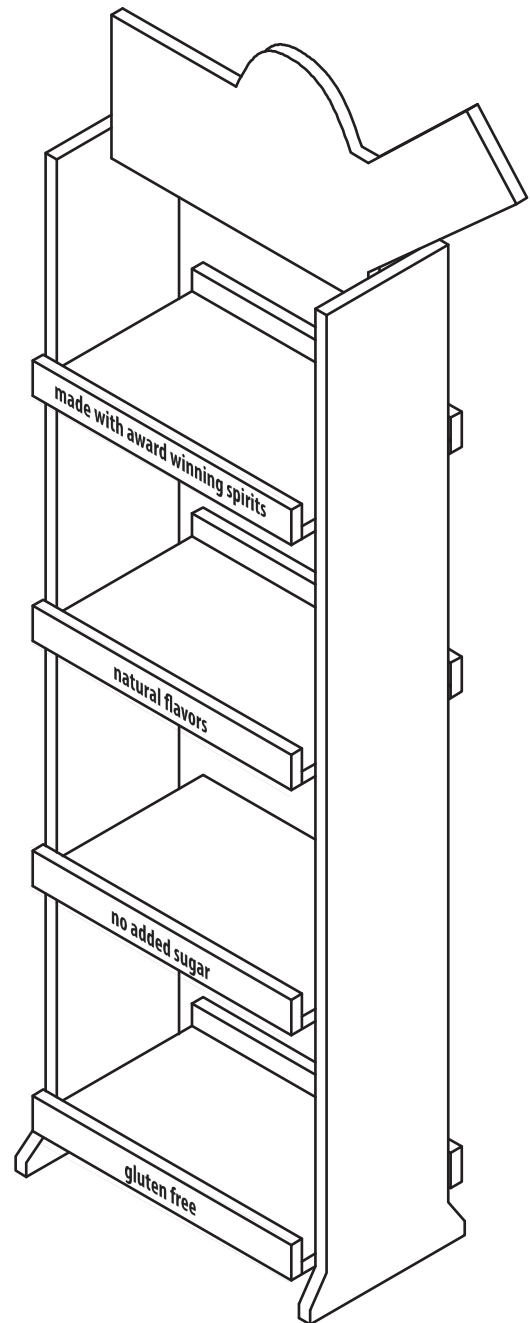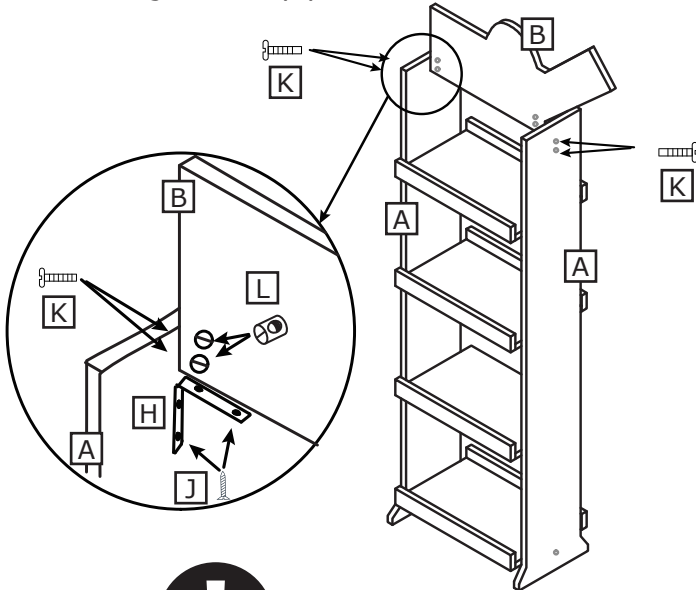

MISSING PARTS / DAMAGE CLAIM INSTRUCTIONS

- 1. DO NOT** discard the box or original packaging.

In the case of damaged goods caused by shipping, photo evidence will be required.

- 2.** Take photos of the box & markings.

A photo of the markings (text) on the side of the box is required for all cases in which a replacement part is needed. This helps to identify the item number and ensures the correct parts are pulled.

- 3.** Take photos of damage (if applicable).

A photo of the damaged part(s) is always required to file a claim and expediently process the replacement part. Please make sure you keep the box even if it is damaged.

- 4.** Send an email with the images requested.

Email a description of the claim along with the images required above at displaybuilds.com/contact or directly to help@displaybuilds.com. Call our toll-free number 1-866-308-8368 for further assistance.