



Scan the QR code or visit the web address directly to view the assembly video: [displaybuilds.com/instructions\\_20087](http://displaybuilds.com/instructions_20087)



<b>A</b>  Bottom Side Frame (L & R) 2	<b>F</b>  Pegboard Panel 3	<b>K</b>  Front Shelf 6	<b>P</b>  Side Header Frame 2
<b>B</b>  Top Side Frame (L & R) 2	<b>G</b>  Top Pegboard Panel 1	<b>L</b>  Front Shelf Lip 6	<b>Q</b>  Header Bracket 2
<b>C</b>  Base Frame 1	<b>H</b>  Top Frame 1	<b>M</b>  Side Footer 2	<b>R</b>  Long Bolt 8
<b>D</b>  Bottom Back Bar 2 Note 2 holes in back for mounting X-Brace	<b>I</b>  X-Brace 1	<b>N</b>  Front Footer 1	<b>S</b>  Short Bolt 33
<b>E</b>  Top Back Bar 2	<b>J</b>  Side Shelf 12	<b>O</b>  Front Header Frame 1	<b>T</b>  Nut 8
			<b>U</b>  6" & 8" Hooks 12
			<b>V</b>  Side Top Frame 2



Scan the QR code or visit the web address directly to view the assembly video: [displaybuilds.com/instructions\\_20087](http://displaybuilds.com/instructions_20087)




This display may be assembled at one of two heights: **85"** or **60"**.


Please select the correct option and follow the applicable instructions below.

## 85" H Option


- 1-1** Insert (B) Top Side Frames into (A) Bottom Side Frames. Slide Vertical Graphic Panels into the front and back channel slides.

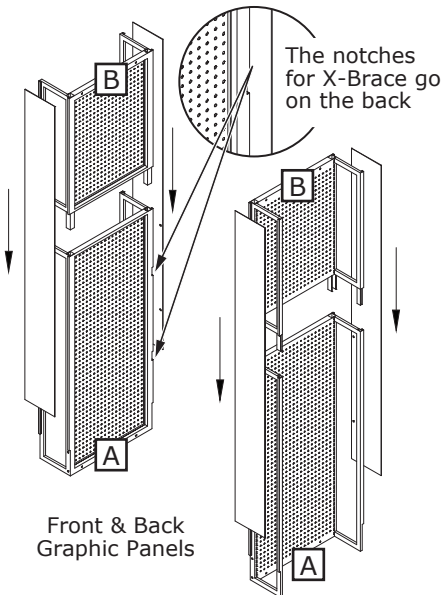


- 1-2** Slide (E) Top Back Bars into (D) Bottom Back Bars and then into (C) Base Frame. Install each (F & G) Pegboard Panel as shown. Then slide (H) Top Frame into (E) Top Back Bars.

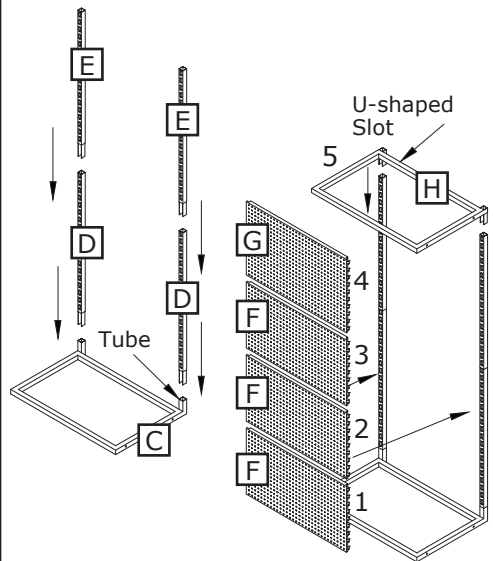


- 1-3** Bolt assembled side frames to center frames with x8 (R) Long Bolts through the (H) Top Frame & (C) Base Frame. Tighten each with tool.

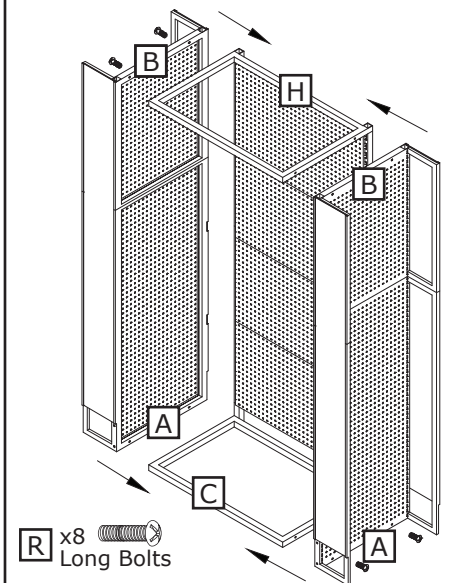


- 1-4** On the back of the display, attach (I) X-Brace with x9 (S) Short Bolts and tighten with tool.

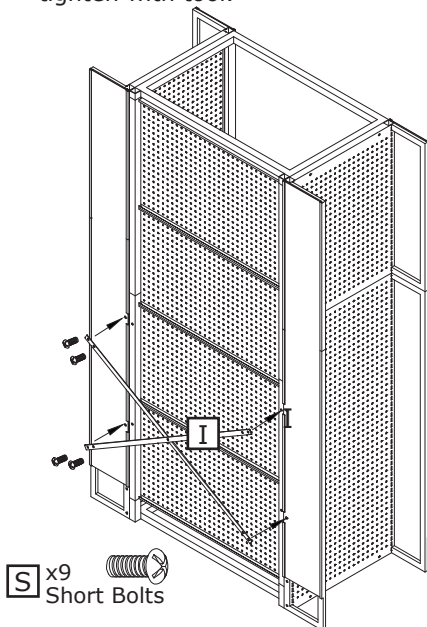

- 1-5** Place (M) Side Footers and then (N) Front Footer as shown and attach with x8 (S) Short Bolts and tighten with tool.

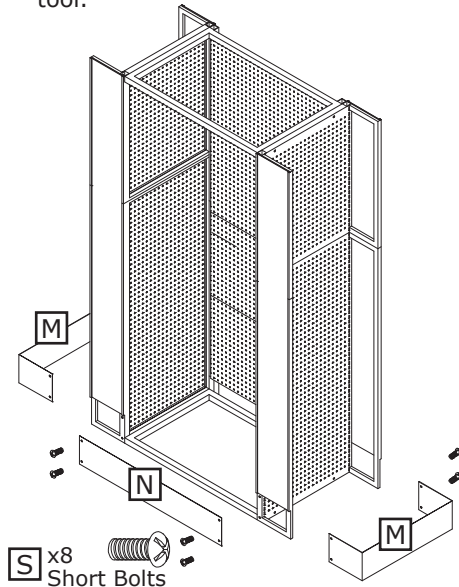

- 1-6** Install x2 (V) Side Top Frames with x8 (S) Short Bolts and tighten with tool. Install x12 (J) Side Shelves at desired heights to fit product. Install x12 (U) Hooks at desired locations.

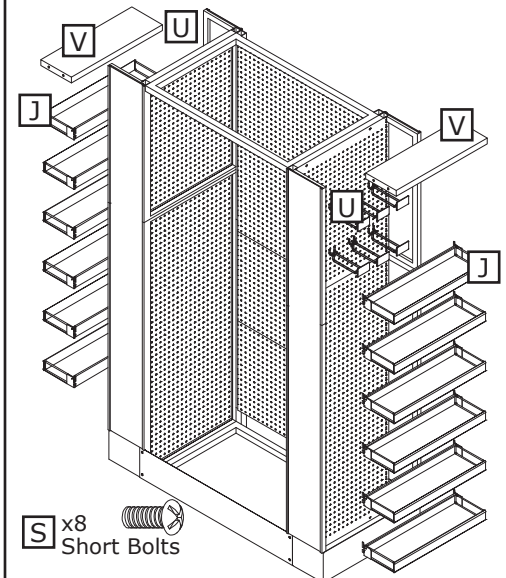





Scan the QR code or visit the web address directly to view the assembly video: [displaybuilds.com/instructions\\_20087](http://displaybuilds.com/instructions_20087)




- 1-7** Attach (L) Front Shelf Lips to front of each (K) Front Shelf. Then install each shelf at the desired height in the center of the display.

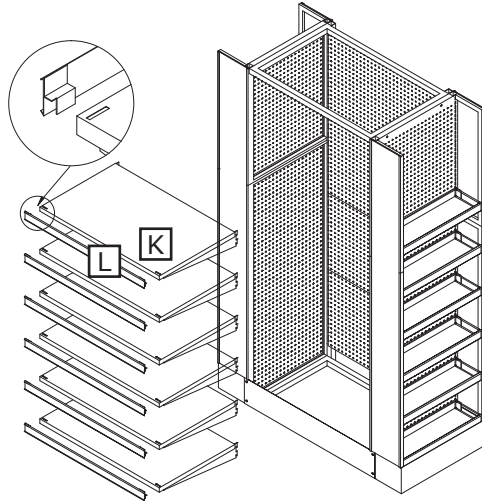

- 1-8** Slide (O & P) Front and Side Header Frames onto display, and using (Q) Header Brackets on the inside front corners, secure with x8 (S) Short Bolts and x8 (T) Nuts. Tighten with tool.

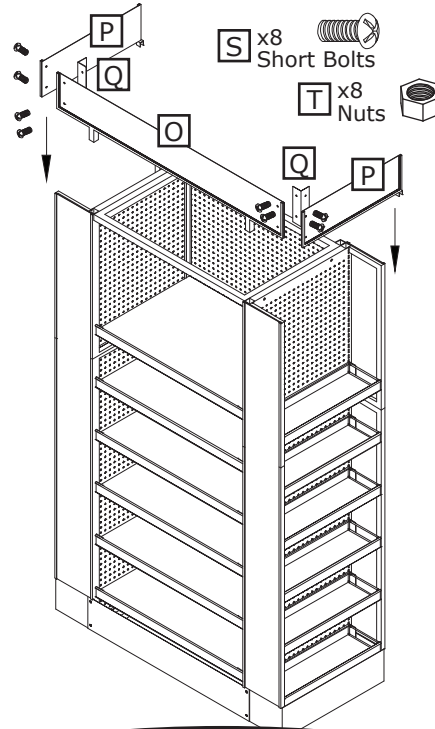


- 1-9** Insert any remaining graphics into corresponding channel slides.

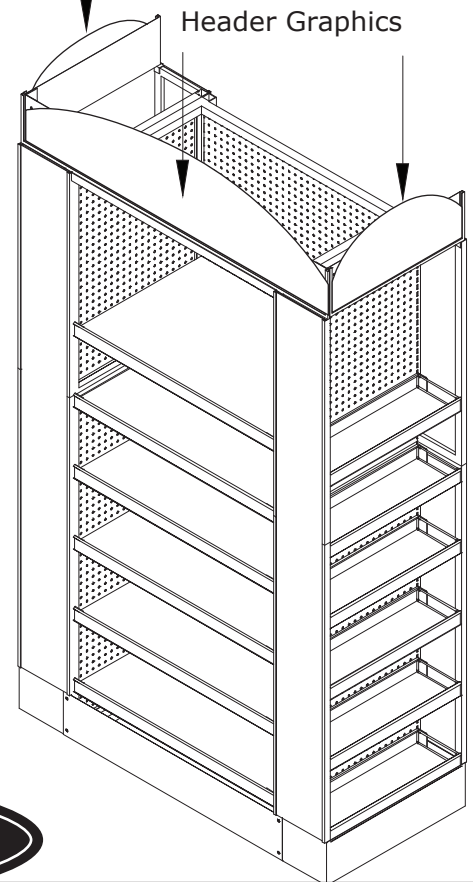


## 60" H Option


- 2-1** Insert (D) Bottom Back Bars into (C) Base Frame. Install each (F & G) Pegboard Panel as shown.

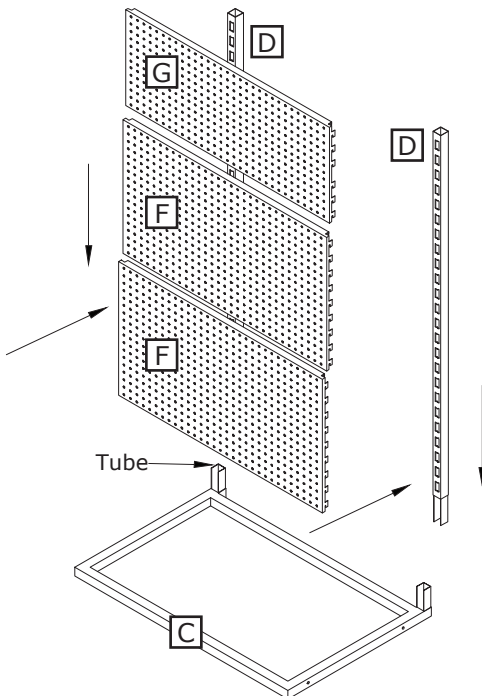

- 2-2** On the back of the display, attach (I) X-Brace with x9 (S) Short Bolts and tighten with tool.

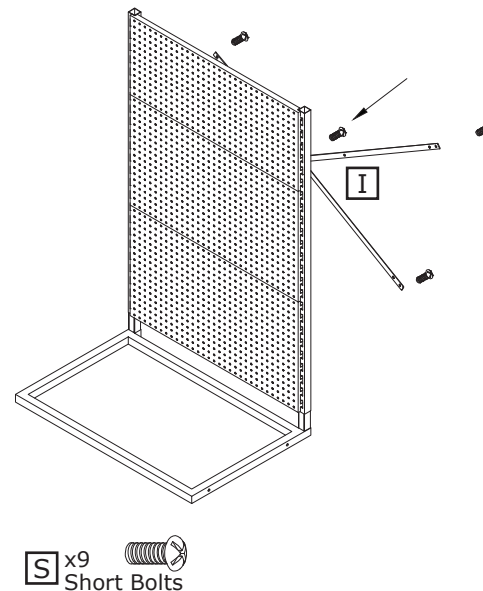

- 2-3** Slide (H) Top Frame into (D) Bottom Back Bars. Then secure each (A) Bottom Left & Right Side Frames with x8 (R) Long Bolts through the (H) Top Frame & (C) Base Frame. Tighten each with tool.

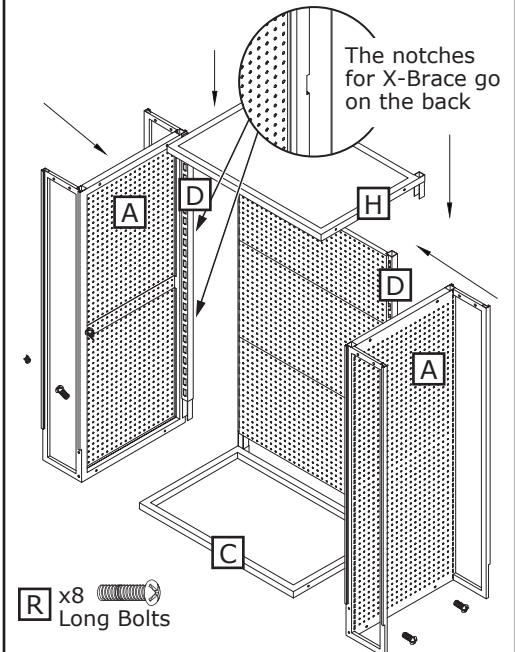







Scan the QR code or visit the web address directly to view the assembly video: [displaybuilds.com/instructions\\_20087](http://displaybuilds.com/instructions_20087)




- 2-4** Attach (L) Front Shelf Lips to front of each (K) Front Shelf. Then install each shelf at the desired height in the center of the display.

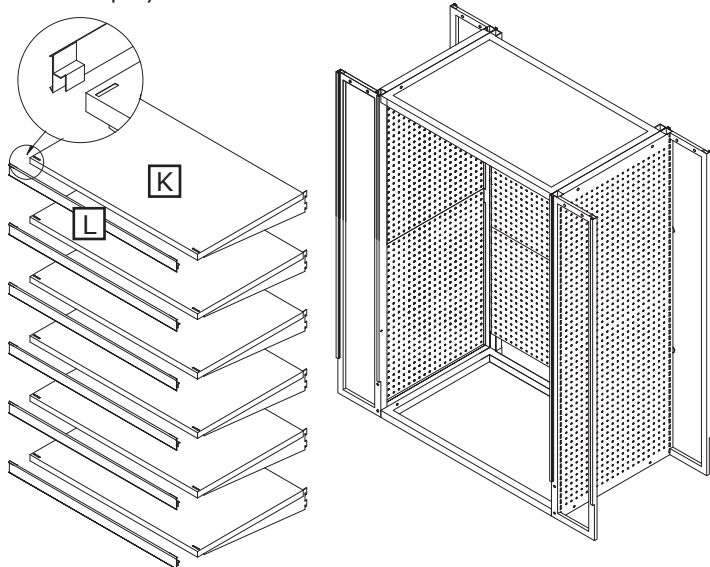


- 2-5** Place (M) Side Footers and then (N) Front Footer as shown and attach with x8 (S) Short Bolts and tighten with tool.

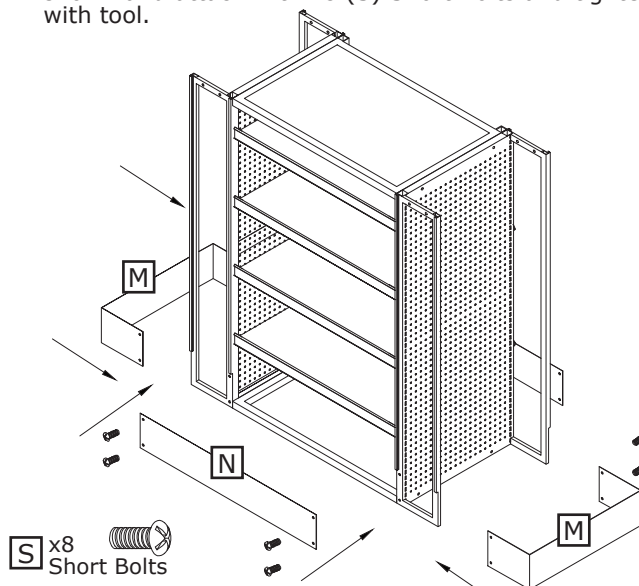


- 2-6** Install x2 (V) Side Top Frames with x8 (S) Short Bolts and tighten with tool. Install x12 (J) Side Shelves at desired heights to fit product. Install x12 (U) Hooks at desired locations.

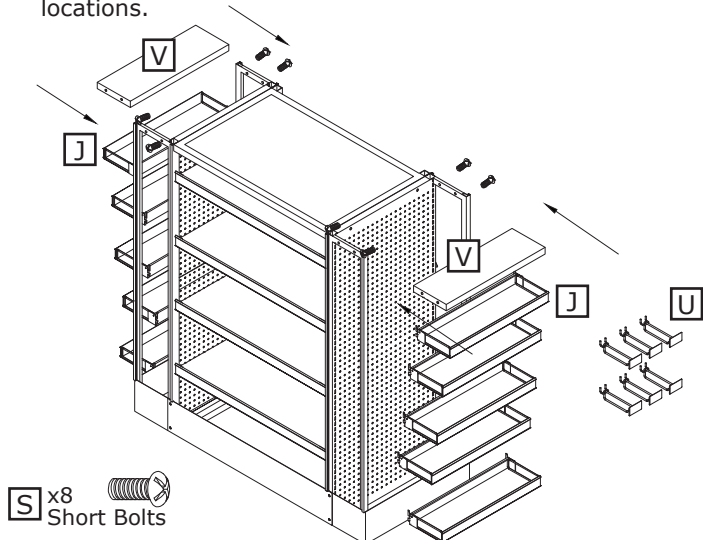

- 2-7** Slide (O & P) Front and Side Header Frames onto display, and using (Q) Header Brackets on the inside front corners, secure with x8 (S) Short Bolts and x8 (T) Nuts. Tighten with tool.

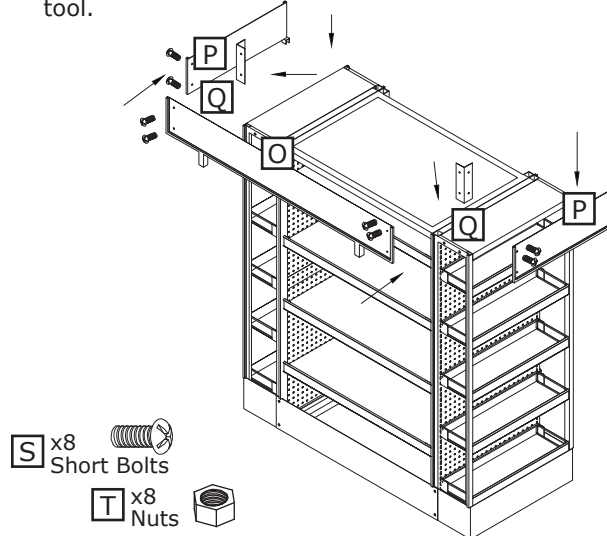

- 2-8** Insert any remaining graphics into corresponding channel slides.

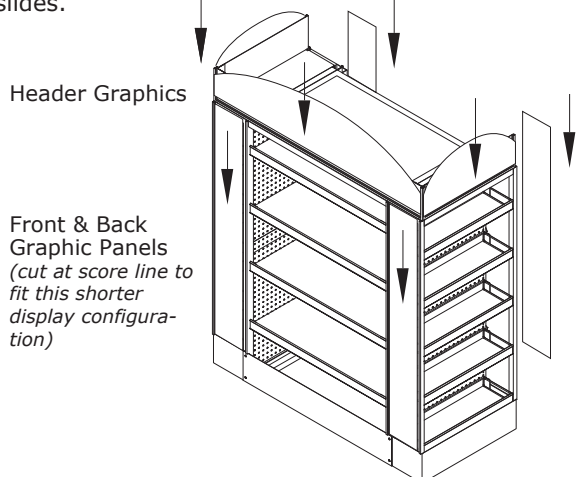

## MISSING PARTS / DAMAGE CLAIM INSTRUCTIONS

- DO NOT** discard the box or original packaging. In the case of damaged goods caused by shipping, photo evidence will be required.
- Take photos of the box & markings. A photo of the markings (text) on the side of the box is required for all cases in which a replacement part is needed. This helps to identify the item number and ensures the correct parts are pulled.
- Take photos of damage (if applicable). A photo of the damaged part(s) is always required to file a claim and expediently process the replacement part. Please make sure you keep the box even if it is damaged.
- Send an email with the images requested. Email a description of the claim along with the images required above at [displaybuilds.com/contact](http://displaybuilds.com/contact) or directly to [help@displaybuilds.com](mailto:help@displaybuilds.com). Call our toll-free number 1-866-308-8368 for further assistance.